Traviata
WALL PANELS
acoustic veneer collection



DIRECT-TO-WALL INSTALLATION GUIDE

Installing your *Wall Panels.*


A simple, step-by-step guide to achieve a professional finish with Traviata Wall Panels, the Acoustic Veneer Collection.

THE PANEL AT A GLANCE

600 mm Panel width	**2400 · 2700 · 3000 mm** Lengths	**22 mm** Thickness	**15 slats** 27 × 13 mm, black MDF core	**9 mm PET felt** Black or beige backing

4-STEP OVERVIEW


1

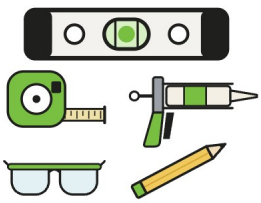

Preparation

Gather your tools and materials. Ensure surfaces are clean, dry and ready.


2

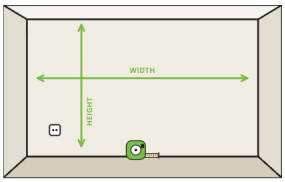

Measurement

Measure the installation area accurately to ensure a precise fit.


3

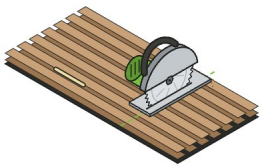

Cutting

Cut the panels to size using a fine-tooth blade for clean edges.

4

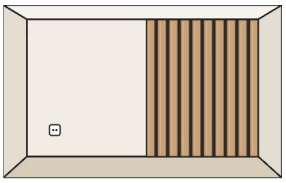

Installation

Secure the panels directly to the wall for a seamless and lasting result.


Pro tip | Plan your layout before installation for the best visual alignment and minimal waste.

Traviata
WALL PANELS
acoustic veneer collection


Preparation & *tools*.

1 Check the site

- Wall must be clean, dry, flat and stable.
- Interior dry-use only.
- Check for hidden cables and pipes.

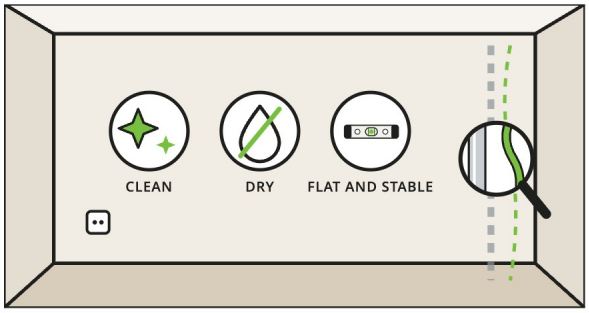


2 Suitable surfaces

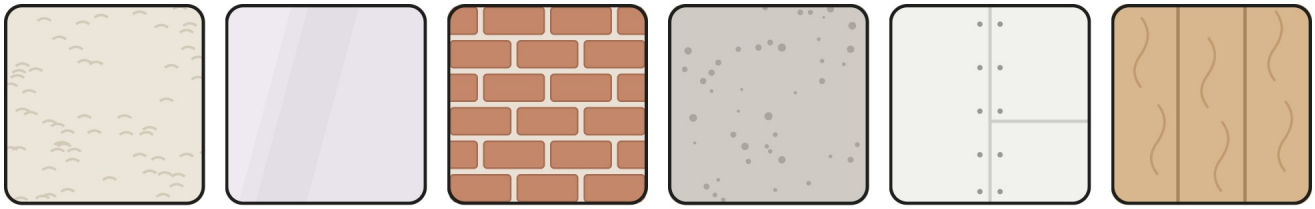

Plastered walls | Painted walls | Brick | Concrete | Drywall | Timber board

3 Tools required

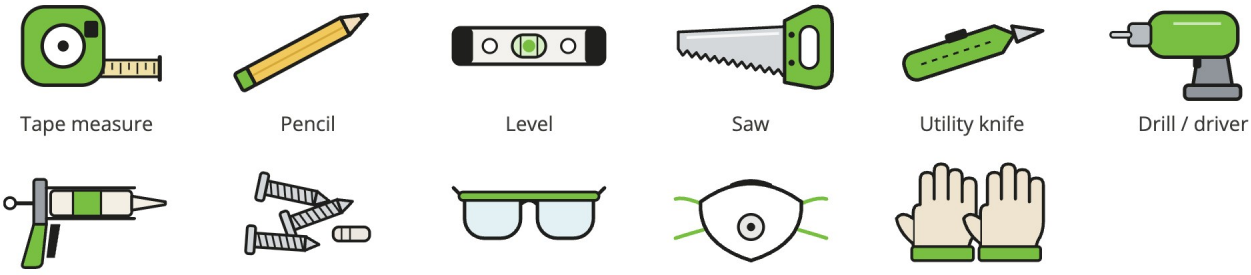


Tape measure | Pencil | Level | Saw | Utility knife | Drill / driver

Mounting glue | Screws | Safety glasses | Dust mask | Gloves

4 Before fitting

- Inspect panels for any damage or defects before installation.
- Keep panels in normal indoor conditions before fitting.
- Mark a straight starting line for a level installation.

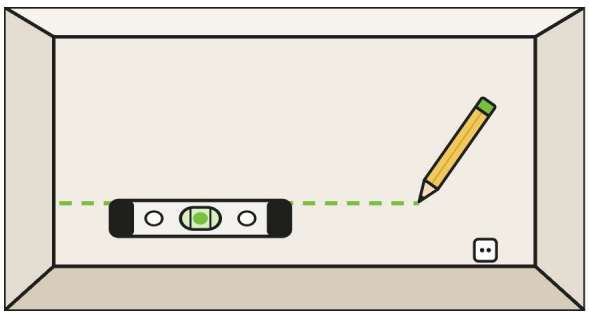


Traviata
WALL PANELS
acoustic veneer collection

Measurement & *cutting*.


Prepare for a precise fit and a clean, professional finish.

1 Measure the wall

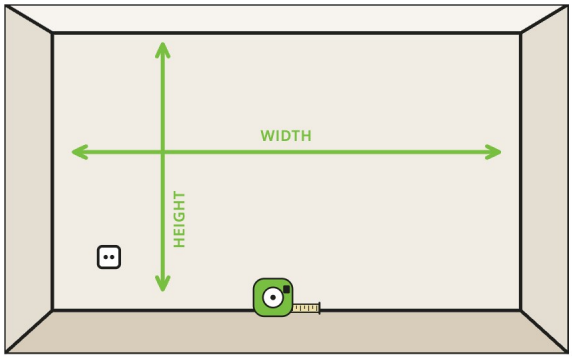


- Measure the total wall width and height.
- Note the position of any sockets, switches or other obstacles.

2 Plan the layout and dry-fit

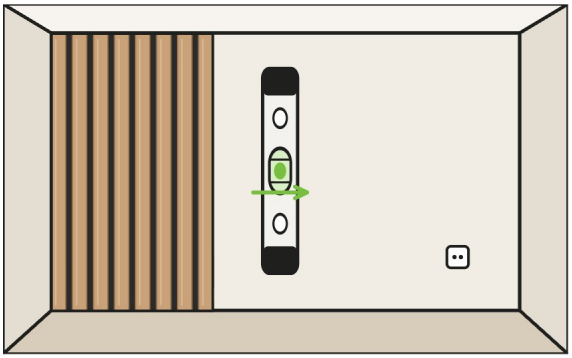


- Plan your layout for even spacing and balance.
- Dry-fit the first panel. Keep it straight using a spirit level.

3 Protect the cut line

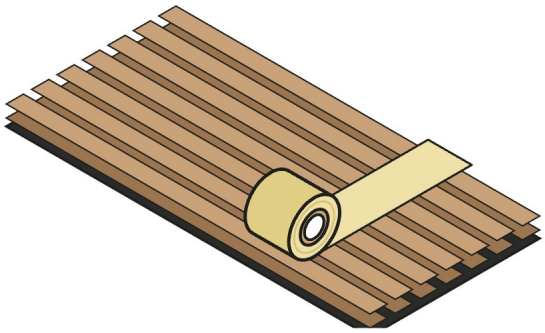

- Apply masking tape firmly along the cut line.
- This helps reduce splintering and keeps the veneer clean.

4 Cut and finish the edges

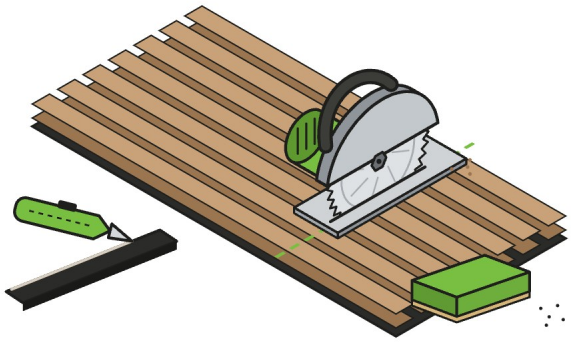

- Cut the panel using a fine-tooth blade.
- Trim any PET felt backing with a utility knife.
- Lightly sand rough edges for a smooth finish.

How many panels?
Wall width ÷ 600 mm, rounded up. Allow a little extra for cuts.

2400 mm panel	2700 mm panel	3000 mm panel
1.44 m^2	1.62 m^2	1.80 m^2



Safety note

Wear safety glasses and cut-resistant gloves when cutting or sanding panels.


Traviata
WALL PANELS
acoustic veneer collection

Installation *methods*.

Choose the method that best suits your wall type and installation needs.

A Method A: Mounting glue


Apply mounting glue in beads or a zig-zag pattern to the back of the panel and press firmly against a smooth, solid wall.

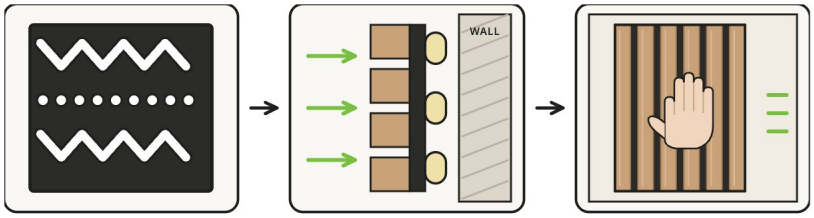

Apply glue in beads or zig-zag pattern. | Position the panel on the wall. | Press firmly across the surface for full contact.

B Method B: Screws


Fix through the acoustic felt between the slats using suitable screws and wall plugs. Do not overtighten.

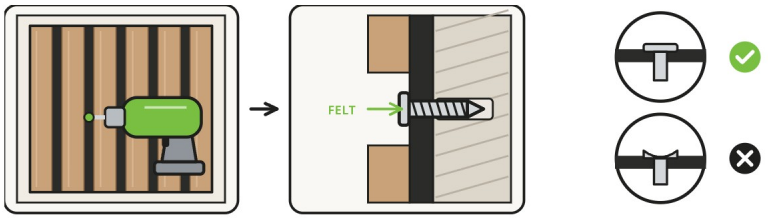

Drill through the felt between the slats. | Use suitable screws and wall plugs. | Do not overtighten. Head sits flush with the felt.

C Method C: Mounting glue + screws

Use mounting glue and mechanical screws together for maximum holding power. Recommended for heavy-use areas and commercial applications.

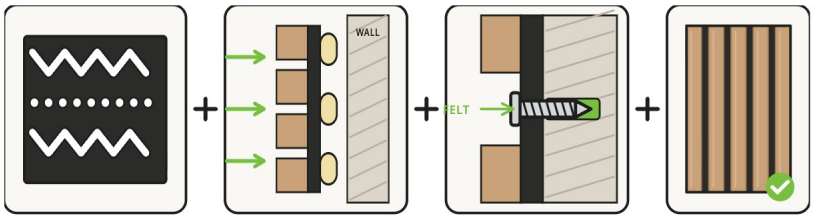


Apply glue in beads or zig-zag pattern. | Position and press the panel. | Add screws between slats for extra hold. | Strong, durable and lasting installation.

Important note

For ceiling installations, always use both mounting glue and mechanical screw fixings. Adhesive alone should not be used on ceilings.

Alignment

- Keep the first panel straight. It sets the line for the rest.
- Check every panel with a level as you go.
- Maintain even slat spacing for a clean, professional finish.

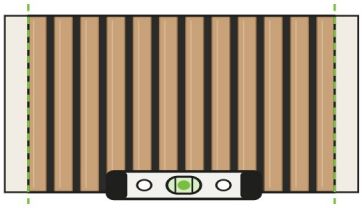


Traviata
WALL PANELS
acoustic veneer collection


Joining, finishing & *maintenance*.

1 Joining panels


- Fit panels side by side.
- Keep the felt flush.
- Keep the slats aligned.
- Check joints as you go.

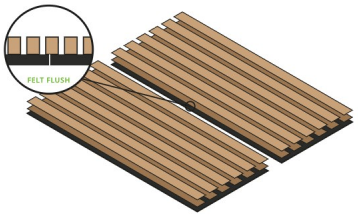

2 Finishing trims available

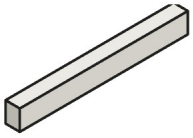



22 mm × 21 mm × 2.4 m
Straight finishing trim for standard direct-to-wall panel installations. Used to finish exposed side edges with a neat, linear appearance.

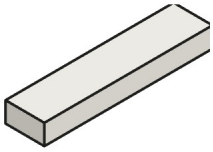



67 mm × 21 mm × 2.4 m
Wider straight finishing trim for deeper exposed edges or larger edge build-ups. Suitable where a broader straight edge finish is required.

3 Where trims may be used (straight edge applications)

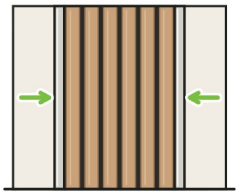
Start or end of a feature wall

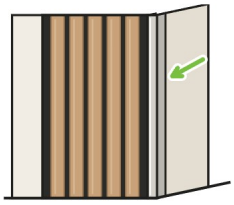
Visible side edges

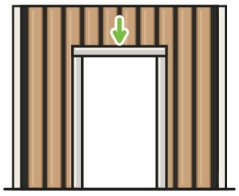
Around openings

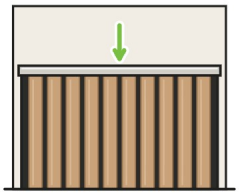
Cut panel edges

4 Care


Vacuum with a soft brush or use a dry cloth.


Do not use water.


Avoid harsh chemicals or solvents.


Interior dry use only.

Traviata
Flooring Systems

We're the Perfect Fit!

Scan to explore the collection